



DS.00



DSWH 00

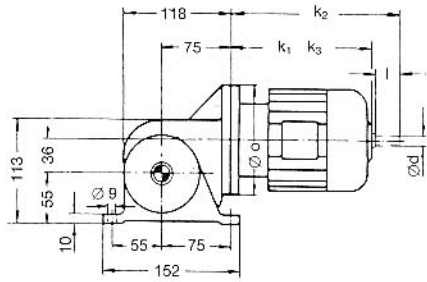


DSWV 00

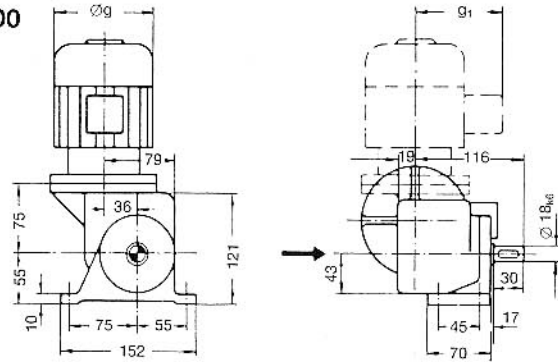


DSWF 00

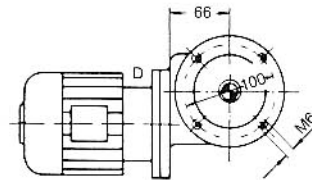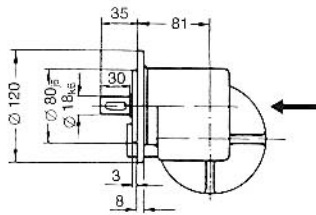


DSWAF 00

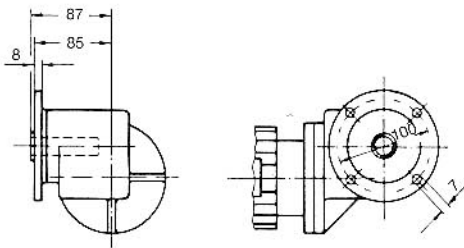


DSWAD 00

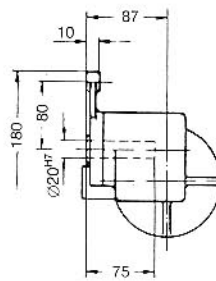



Stütze in Stellung A, B, C oder D  
bracket in position A, B, C or D  
support en position A, B, C ou D

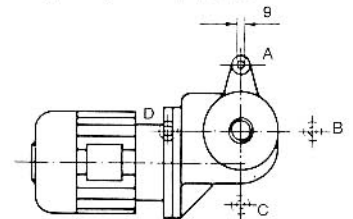



DSKH 00

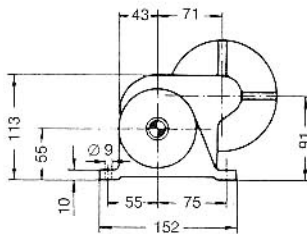

DSKV 00

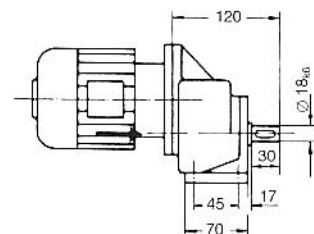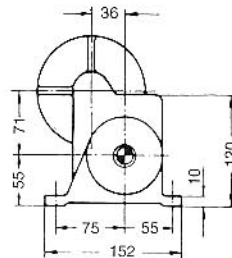

DSKF 00

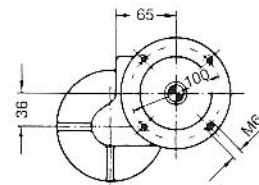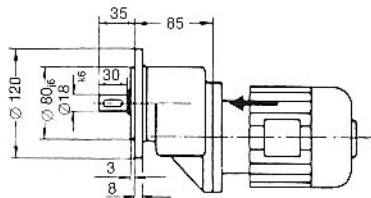

→ Einstellschraube für Sicherheitsrutschkupplung  
Adjustment screw for overload device  
Vis de réglage pour le limiteur de couple

<sup>1)</sup> Nur für Bremsmotoren  
For brakemotors only  
Seulement pour moteurs-frein

Motor-Typ	k <sub>1</sub>	k <sub>2</sub>	k <sub>3</sub> <sup>1)</sup>	o	g	g <sub>1</sub>	l	d
56 N <sup>2)</sup>	167	191	201	120	111	100	20	9
63 N <sup>2)</sup>	188	216	246	120	123	107	23	11

<sup>2)</sup> Motoren K und N haben gleiche Abmessungen  
Motors K and N have the same dimensions  
Dimensions identiques pour moteurs K et N